

## Important Safety Instructions

This document contains important safety and operating instructions. Please read all instructions thoroughly before operating the charger and keep them for future reference.

### Charging Instruction:

- Before charging, please connect the battery first, and then connect the AC power source. After charging is complete, disconnect the AC power first, and then disconnect the charger from the battery.

- During charging, the LED indicator is on:

LED INDICATOR	MODE
Green LED on	Standby
Red LED on	Charging
Green LED on	Fully charged
Red LED flashes	Fault

### Caution:

- The charger is designed for indoor use only. Do not expose it to liquid, vapor or rain.
- Do not attempt to use this charger with anything other than Li-ion rechargeable batteries. Using it in combination with other batteries may cause fire, explosion, leakage, or overheating.
- Do not use the charger in locations that are
  - Extremely hot or cold
  - Dusty or dirty
  - Very humid
  - Vibrating
  - Strong magnetic fields
  - Sandy
  - Exposed to direct sunlight

- During charging, the battery and charger must be placed in a well-ventilated area.
- Do not drop or apply mechanical shock to the charger.
- To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting. Do not operate the charger with damaged cord or plug, replace the cord or plug immediately.
- Do not operate the charger on an easily ignited surface (e.g. paper, textiles, etc.) or in a flammable environment. There is a risk of fire due to the charger heating up during operation.
- Do not operate the charger if it has received a sharp blow, been dropped, or otherwise damaged in any way; take it to a qualified technician personnel.
- Do not disassemble the charger; take it to a qualified service personnel when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

### Cleaning:

To keep the charger clean you can use a dry cloth, never clean the charger with water.



This product must not be disposed together with the domestic waste.

This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.